



USER MANUAL

BR1, (BR2, BR3) systems Wireless chain-rode Counter with Windlass and Thruster remote control for vessels

Function descriptions:

The system of wireless chain counter consists of:

- Wireless handheld unit BR1-Remote (BR2=BR1+stern thruster buttons)
- Base unit:
 - BR1_Base (chain counter, windlass control)
 - BR2_Base (chain counter, windlass, bow thruster, deck lights, pump)
 - BR3_Base (chain counter, windlass, bow & stern thruster, deck lights, pump)
- Windlass sensor and magnet
 - * WWS (Wireless Windlass Sensor) module for quick and easy installation (see description on next page)
 - * Option available with BR2_Base and BR3_Base.

List of Material:

BR1 system: - BR1_Remote unit
- BR1_Base unit

BR2 system: - BR1_Remote unit
- BR2_Base unit
*OPTION - WWS (Wireless Windlass Sensor)

BR3 system: - BR3_Remote unit
- BR3_Base unit
- WWS (Wireless Windlass Sensor)

BR1 or BR2 or BR3 **AND:**

- Satin blue lanyard
- Magnet disc for windlass, diameter 8mm, heigh 5mm
- Reed contact sensor for windlass - universal
- 3xAAA Batteries (1,5V x 3pcs)
- Screws for fixing Base unit 2pcs
- CD Manuals English and in local language (download from www.boat-remote.com)

SAFETY NOTICES:

Product installation and Operation

- This product (BR1, BR2, BR3) must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, death, damage to your vessel and/or poor product performance.

Warning: Ensure safe operation

- Only skilled adult person with experience and knowledge for safe operation of anchor windlass and boat thrusters may use this product!

- Improper use of equipment can be dangerous and can lead to life threatening situations
- ALWAYS CHECK BEFORE you operate the BR if it is safe and there is nobody in vicinity and that use of windlass or thruster is not potentially dangerous to anybody around.
- It is the user's responsibility for safety use.
- Installation must be carried out by electrician.

DISCLAIMER

- Producer is not responsible for damages or injuries caused by your use or inability to use the product.
- The use of the BR1, BR2 or BR3 product is permitted only on owners or captains own risk, regardless of situation, cause or consequences.
- If you not agree or your jurisdictions do not allow the exclusion of incidental or consequential damages, then you must return product within 8 days to sales point in original packaging and unused to get money back.

Water ingress disclaimer

Although the waterproof rating capacity of BR1, BR2 hand held unit exceeds that called for by the IP67 standard and of BR1_Base IP65 standard, water intrusion and subsequent equipment failure may occur if any equipment is subjected to running water, high pressure washing or submersing in water. Producer will not warrant equipment subjected to those exposures.

Caution: Cleaning

When cleaning this product:

- Do NOT wipe the display screen with a dry cloth, or paper as this could scratch the screen
- Do NOT use abrasive, or acid or ammonia based products
- Do NOT use a pressure or jet wash

Caution: Direct sun light

To protect your product against the damaging effects of ultra violet light and to extend life time keep BR handheld in shadow and dry place.

Caution: Power supply protection

When installing this product ensure the power source is adequately protected by means of a suitably-rated fuse or automatic circuit breaker.

Product disposal

Dispose of this product in accordance with the WEEE Directive. The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment. Whilst the WEEE Directive does not apply to some BR products, we support its policy and ask you to be aware of how to dispose of this product.

Features of BR1_Handheld remote unit



ON/OFF

- To **power ON** hold. (Short double beeps)
- To **power OFF** press momentarily. (Long single beep)
- After power up on LCD caution message appear. **BEFORE YOU CONFIRM CHECK** if you can operate BR safely! Confirm safety caution message by presing OK to proceede.
- If you suspect that anything is not operating normal, power OFF unit by pressing momentary OFF button and check for malfunctions.
- To save battery BR1_Remote will switch off automatically after 10 minutes.

IMPORTANT SAFETY CAUTION:

For EMERGENCY STOP during operation, press ON/OFF momentarily and all output relays in Base unit will be disengaged immediatelly.



MENU,

- Press to enter menu.
- Hold 3sec for quick counter reset (00,0)



LIFT the ANCHOR (UP)

Windlass will lifting anchor as long as you keep pressing »UP«. Chain counter will decrement chain – rode lenght.

IMPORTANT:

- When »UP LIMIT« is reached, windlass will stop even if you keep pressing »UP«. To continue release »UP« and carefully lift remaining distance to dock the anchor. By default this limit is set to 1m before anchor park.
- Limit can be set in Menu > Setings > Up Limit.



LOWER the ANCHOR (DOWN)

Windlass will lower the anchor as long as you keep pressing »DOWN«. Chain counter will increment chain-rode lenght.

IMPORTANT:

- When »DOWN LIMIT« is reached, windlass will stop even if you keep pressing »DOWN«. To continue release »DOWN« and carefully lower remaining lenght of chain - rode. By default this limit is set to 30m.
- Limit can be set in Menu > Setings > Down Limit.



BOW THRUSTER, left <> right (BR2_Base and BR3_Base)

Press momentarily for lateral movement of vessel.

IMPORTANT:

- To gain controll of bow thruster by BR you must enable Bow Thruster on original controll panel first!
- For safety operation of Bow Thruster see producers manuals



QUICK FUNCTIONS

Press »OK« to enter quick function selection. See LCD for functions. Select quick function by pressing a corresponding button (up,down, left, right). Pres »OK« for EXIT without selection or wait until counter in lower right corner on LCD countdown to 0.



AUTO UP/DOWN

Select quick functions by pressing »OK« and press »UP« for automatic lifting of anchor or select »DOWN« for automatic lowering the anchor. Windlass will operate without holding the button! AUTO function is active when simbol on right is present on LCD.



IMPORTANT:

- Press any button to cancel AUTO UP/DOWN function and stop windlass!
- Keep remote unit in hand with thumb ready to momentarily press any button.
- AUTO function will stop when »UP LIMIT« or »DOWN LIMIT« is reached.



LIGHT ON/OFF (BR2_Base and BR3_Base)

Select quick functions by pressing »OK« and press BULB SIMBOL. Highlighted symbol means »light ON«. Repeat to switch light OFF.

During normal operation in botom row symbol of bulb is indicating »light ON«. Available with BR2_Base and BR3_Base



WATER PUMP (BR2_Base and BR3_Base)

Select quick functions by pressing »OK« and press WATER TAP symbol. Highlighted symbol means »pump ON«. Repeat to switch pump OFF.

During normal operation in botom row symbol of water tap is indicating »pump ON«.

SETUP – handheld unit



Press »M« (Menu) to enter menu mode.
 In MENU mode use arrow keys (up, down, left and right) to select.
 Use »OK« to select, confirm and save.
 Use »M« or »back« symbol to cancel and exit without saving



Structure:

MENU:

- **COUNTER RESET:** (quick reset - press »M« for 3sec during normal operation)
 - YES/NO (Yes – sets counter to 0)
- **SETUP:**
 - UP LIMIT (default set to 1,5m)
 - DOWN LIMIT (default set to 30m)
 - CALIBRATION:
 - NUMBER OF MAGNETS, (pulses per turn, default 1)
 - CHAIN PER TURN (default 330mm)
 - UNITS: (see arrow)
 - METRES (M)
 - FEET (F)
 - REVOLUTIONS (R)
- **SELECT CHANNEL:** Available channels 2-13
 - Select channel and confirm with »OK« or exit without saving with »M«.

IMPORTANT: BASE has to be in close range.
 If signal is not good channel selection is not possible.
 It is possible to select channel only with remote unit logged to base.

- **LOGIN.** To enter new handheld remote unit to base you need to enable »ADD new remote to base« in base FIRST! See SETUP-base.
 While leds (on base) are blinking confirm »LOGIN« on handheld remote unit.
 See report on LCD:
 LOGGIN SUCESS - LCD you will see report. Press »M« for exit from Menu.
 LOGIN FAILED – can be caused by comunication interferences, bad batteries in handheld, full or bad memory, damaged one or both of units
- **LANGUAGE:**
 - ENGLISH
 - GERMAN
 - SPANISH
 - SLOVENSKO

Calibration of chain/rode counter

Sensor on windlass is detecting revolutions of windlass gipsy. Lengh of chain/rode deployed(winched) per revolution has to be adjusted to achieve aqurate chain counter reading.

First you need to set up number of pulses per gipsy revolution.

Select, MENU > SETUP > CALIBRATION >:

- NUMBER OF MAGNETS, (pulses per turn, default set to 1)

Set number of pulses per one turn of windlass gipsy. One pulse per revolution is standard for majority of windlasses on market.

- CHAIN PER TURN (default METRES-330mm, FEET-12,9inch)

Calculate value of »CHAIN PER TURN):

You need to calculate chain lenght per one gipsy turn and enter value in »CHAIN PER TURN«.

A. Mark gipsy with duct tape and count revolutions while lowering or lifting anchor with BR1 remote or original switches for controlling anchor windlass.

You can count revolutions also with BR1

Select: MENU > SETUP > UNITS > REVOLUTIONS > Exit from menu.

B. Set chain on starting position and reset counter, hold »M« for 3sec. If chain is skipping gipsy when anchor is lowering then count number of turns rather at lifting it.

C. Lower or lift anncchor chain/rode

D. Calculate value of »chain per turn«:

Example1: On chain lenght of 10m 31 revolution is counted.

Calculation: $10\text{m}/31\text{rev} = 10.000\text{mm}/31\text{rev} = 322,5\text{mm}$ > enter: 323mm

Example2: At lifting full 50m of chain 154 revolutions was counted.

Calculation: $50\text{m}/154\text{rev} = 50.000\text{mm}/154\text{rev} = 324,6\text{mm}$ > enter: 325mm

E. Enter calculated value in:


MENU > CALIBRATION > CHAIN PER TURN – enter value

F. Select desired units. For »metres« select:

MENU > SETUP > UNITS > METRES > Exit from menu.

IMPORTANT:

Chain should run smooth and without skipping. If not, counter can't be acurate and automatic stop safety function will not stop every time on same chain lenght.

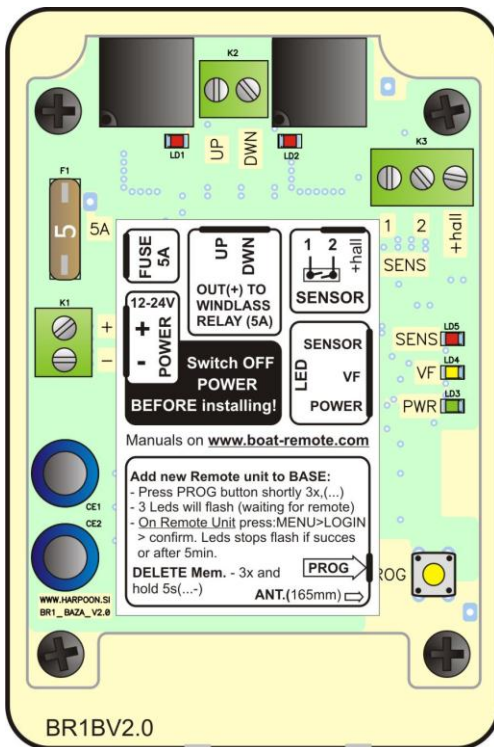BR1_BASE

BR1_BASE communicate bidirectionally with wireless hand held unit. With buttons on hand held, relays on base are controlled. Relays providing + signal to operate standard windlass contactor. Sensor is counting windlass revolutions and base is calculating chain-rode deployed and transmitting result to handheld unit.

LD1 (UP) in LD2 (DOWN) Relay output indication

LD5-SENS red Magnet over sensor indication. Handy for test during installation.

LD4-VF yellow Lights when handheld is operating, (Flashing when error occurs on RF module)

LD3-PWR, green Lights when operating and slowly flashing when base is in sleep mode.

PROG button for adding new remotes to base and for deleting memory.

IMPORTANT:

ANTENNA is 165mm long wire and should never be shortened, cutted, extended or anyhow modified. Antenna is directly influencing communication quality and safety of system. Never tight antenna with plastic tie to other cables or parallel with metal. For high frequency it is like being shortened to ground and range will be in that case substantially reduced.

Base – setup


1. ADD new handheld unit to base:
 - Press PROG button on base shortly 3 times (3x ...)
 - LEDs will start to flash
 - during LEDs flashing on base unit select »LOGIN IN BASE« on handheld unit
 - See LCD for report
 - LOGGIN SUCESS – LEDs stop blinking
2. DELETE MEMORY (all handhelds and setup):
 - Press PROG button on base shortly 3 times (3x ...)
 - LEDs will start to flash
 - Hold PROG for 5 seconds
 - LEDs will go ON for 2 seconds. Memory is erased.
3. EXIT:
 - press PROG button shortly to cancel function
 - or wait 5 minutes for auto exit. Memory will remain unchanged

INSTALLATION



correctly - glands from bottom




WRONG

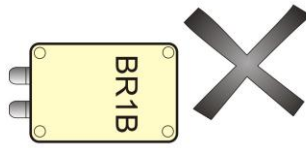

WRONG

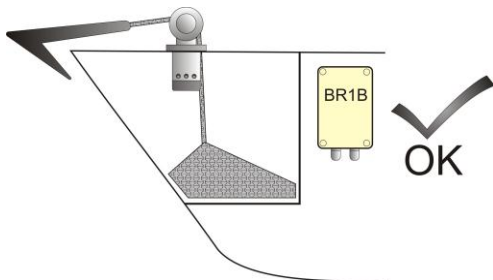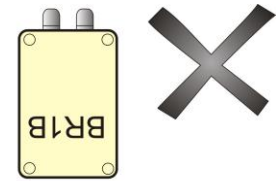

RECOMMENDED!!

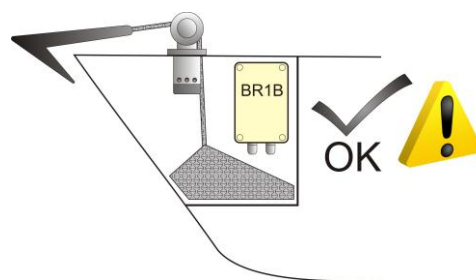


BE CAREFULL – HIGH HUMIDITY

IMPORTANT:

- Both ways are correct for BR1_Base, but you need to be more accurate and pedant when installing BR1_Base unit in chain locker to prevent corrosion of connections.
- If BR1 is recommend to be installed in additional watter protected enclosure IP65.
- BR2_Base and BR3_Base should never and under no circumstancess be installed in chain locker unless it is installed in additional watter protected enclosure IP65. It is also recommended for BR1 especially if mounting area is not vertical, flat or if BR1 is oftenly exposed to running water.

BR1_Base installed in front cabin

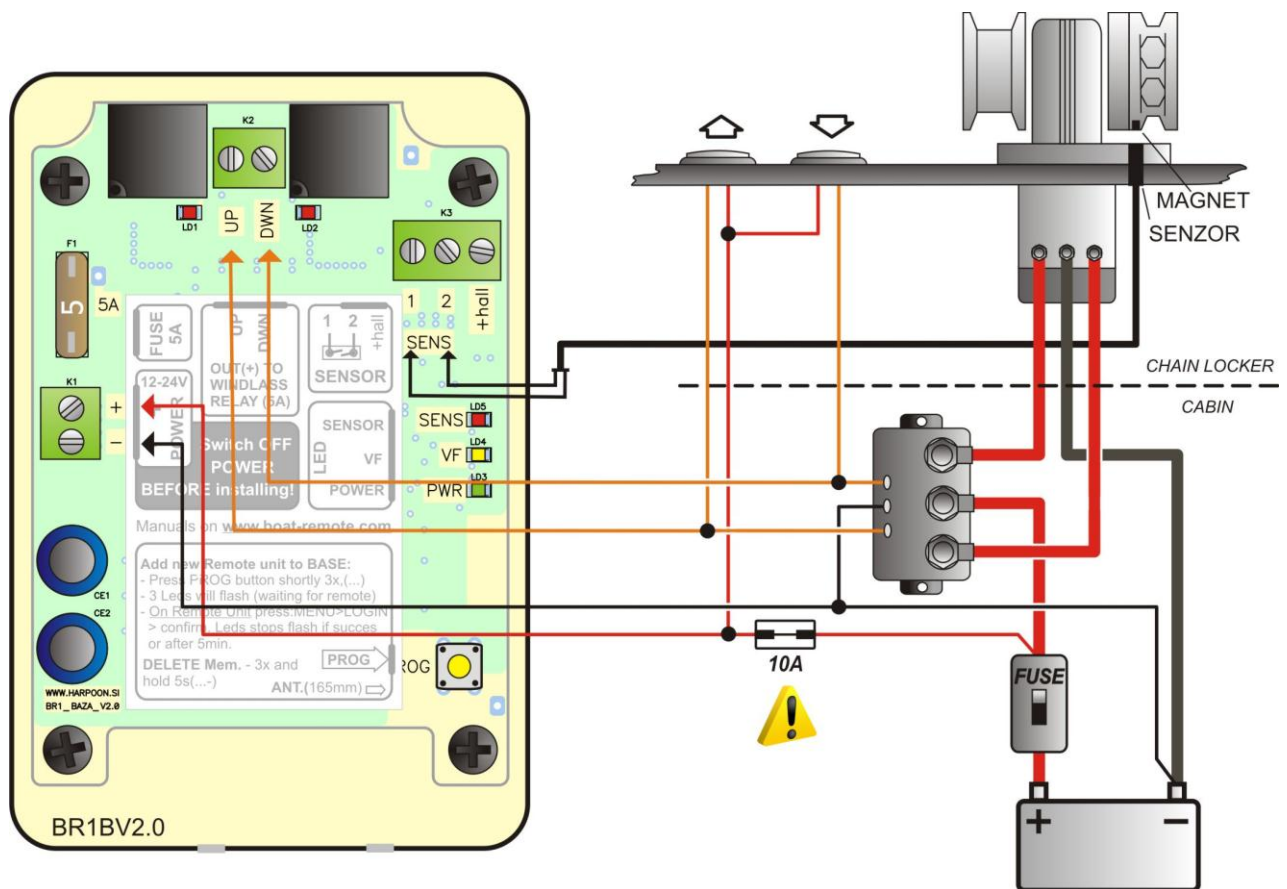


It is recommended to install BR1_Base unit inside vessel in dry place.
Make connections (piggyback) at windlass contactor where you will find all necessary wires.

IMPORTANT

- Before installation disconnect power!
- Check with instrument if windlass power is really disconnected.
- BR1_Base enclosure must be oriented vertically with glands down.
- For metal and carbon vessels check range before fix installation.

BR1_Base installed in chain locker

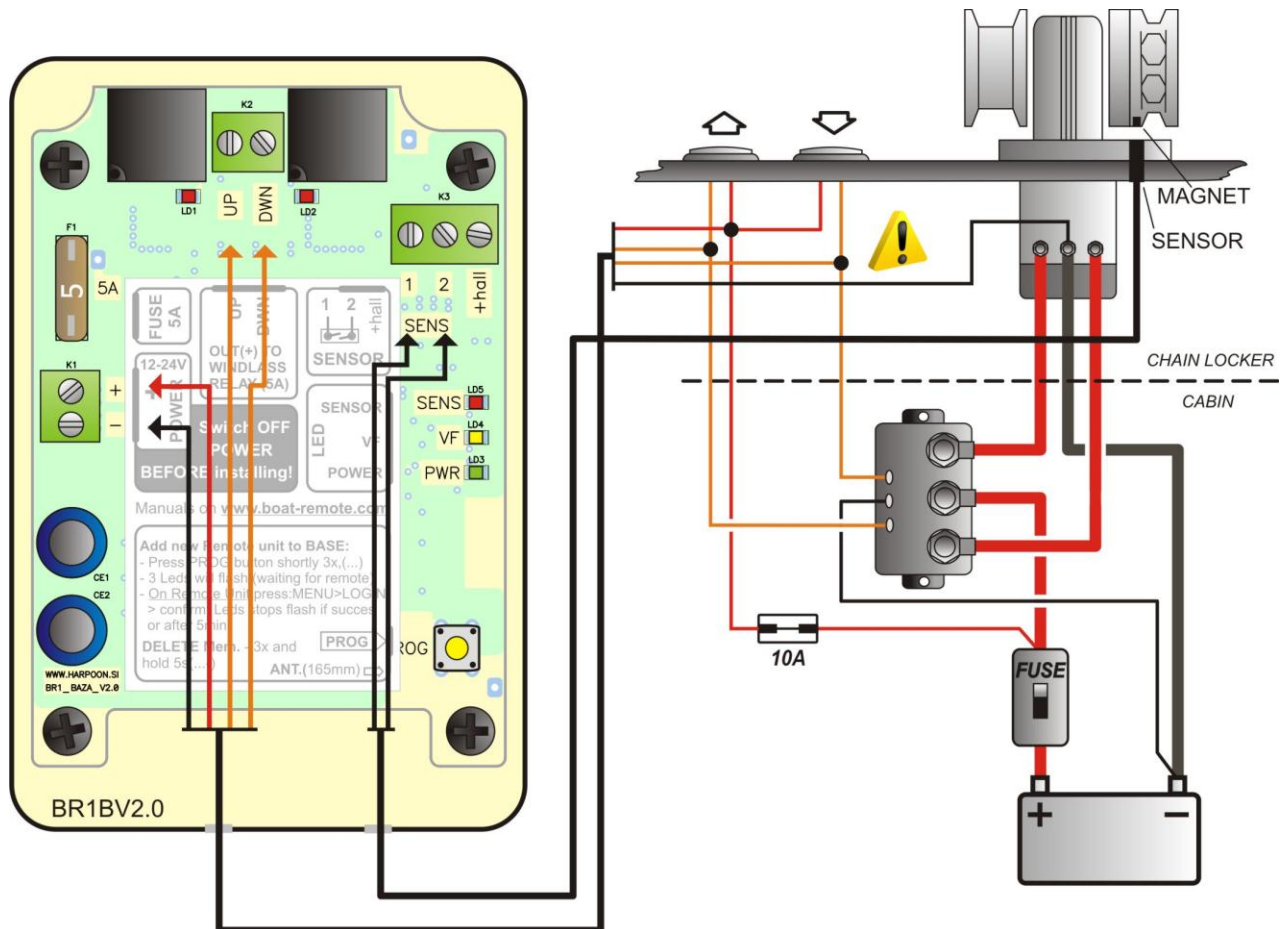

This is the most simple and fast way to install BR1_Base on vessel, but you need to make high quality connections for long years trouble free and safe operation.

Complete all three connections marked with exclamation mark on schematic in separate IP65 box and use connection method which will prevent water to penetrate and corrode wires and contacts.

IMPORTANT



- Only two cables may enter BR1_Base! (cable for power and control, cable for sensor)
- Before installation disconnect power!
- Check with instrument if windlass power is really disconnected.
- BR1_Base enclosure must be oriented vertically with glands down.
- For metal and carbon vessels check range before fix installation.
- Do not use water pressure cleaning on or near BR1_Base!

BR1_Base enclosure is made by IP65 standard (running water and dust resistant). Before fixing the cover check gasket to be on place. With time gasket loses elasticity and water protection is lower. It is recommended to prime gasket with vaseline before closing cover. Always gently screw cover screws till end.

Ground wire connect directly to windlass motor only as last solution if you have no other dedicated ground connection available in chain locker. The most issues are recorded exactly because of bad contacts on windlass ground wires or because they are undersized.

ALWAYS make connections in protection box (IP65).
Make quality connections and protect them.

- 1 - terminal
- 2 - soldered
- 3 - shrink tube with glue
- 4 - wire
- 5 - greased

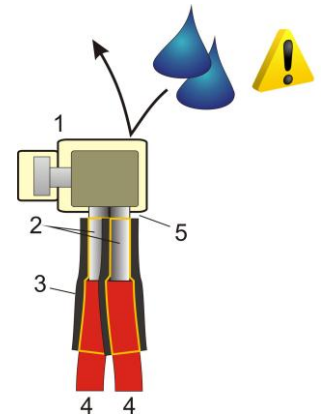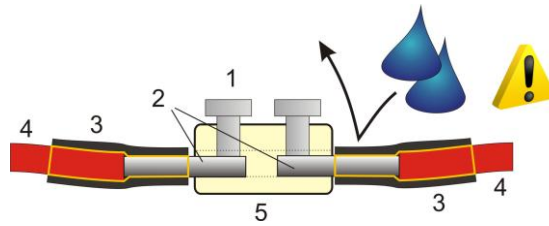





Windlass sensor installation

If windlass is not yet equipped with sensor then use universal added in kit.

Magnet

- Drill 8mm(diameter) hole, 7mm deep for magnet in anchor gypsy. It is normally made from brass and it is easy to drill. Mark position with smaller drill first.
- Glue magnet with epoxy. If you not cover (protect) magnet with enough epoxy it will rust and decay in short time.

N/S pole orientation is not influencing sensing distance.
Orientation of sensor respect to magnet and rotation:

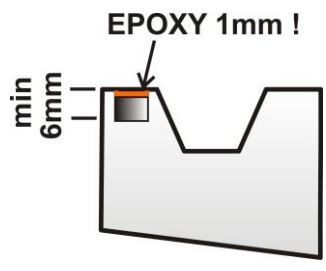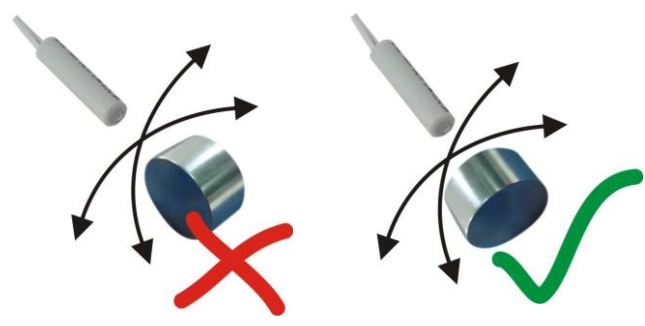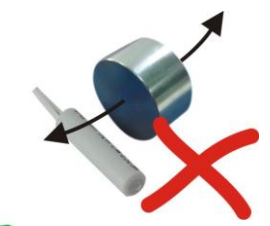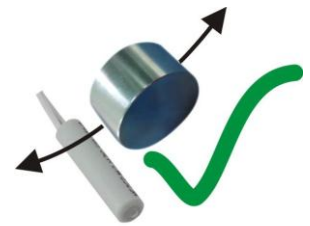

Sensor

For sensor installation universal holder is not available. You need to use your own technical skills to fix sensor in magnet field range. For ideas and examples of installation check picture gallery on www.boat-remote.com.

Orientation of sensor must correspond to above instructions. For installation you can use standard nylon 7mm cable gland. Fix nylon gland, insert sensor, trim distance and tighten the cap to fix sensor.

Technical data

Product: BR1 system

Wireless handheld remote: typ, BR1_Remote

Display: LCD transfective, direct sunlight viewable

Resolution: 128 x 64 pixels

Back light: yes (smart)

Keypad: foil with perforated buttons, watertight

Power: battery AAA x 3pcs (for one year operation)

Power consumption: 41mA with back light, StBy:33mA, (OFF-9uA)

Protection: IP67 Handheld remote unit is moisture resistant, operation with wet hands, rain, water splash (not under pressure). Unit is made to be water resistant, but we do not guaranty to be watertight when submerged in water. Please carefully follow battery replacement instructions for maximal water resistance.

Dimensions: 120mm x 70mm x 30mm (long, wide, deep)

Weight:

Base : typ, BR1_BaseV20

Power supply: 12-24V, min 9V

Power consumption: @ relay on: 87mA, StBy: 40mA, sleep: 13mA

Outputs: 2 (UP, DWN)

Output type: relay 20A, current limited with fuse 5A

Sensor input: reed voltageless – classic or hall

Dimensions: 120mm (140mm with glands) x 80mm x 42mm (long, wide, deep)

Teža:

Communication: bidirectional

Range: min 20m @ wood or plastic hull, min10m @ metall hull

Number of channels: 13 channels (2-13 available for custom selection)

Frequency: 434.040-434.790MHz

RF power (e.r.p): 10mW

Bandwidth: 25kHz

Standard: ETSI EN 300 220-3, clas 1e2

Comm. speed: 8kbps

FEC: 8 bit

coding: 32 bit

Produced by:

Harpoon elektronika d.o.o.

Hrastovec 14

1236 Trzin, Slovenia EU